


*** IMPORTANT ***

PLEASE RETAIN THIS INSTRUCTION SHEET IN YOUR FILES. IT CONTAINS IMPORTANT REPLACEMENT PARTS INFORMATION. ALL EQUIPMENT SHOULD BE INSTALLED IN ACCORDANCE WITH THESE INSTRUCTIONS.

IT IS IMPORTANT TO USE AND MAINTAIN ALL PUBLIC PLAYGROUND EQUIPMENT PROPERLY. PLAYGROUND EQUIPMENT WHICH IS IMPROPERLY MAINTAINED CAN CAUSE SERIOUS INJURY. PERIODICAL INSPECTIONS, MAINTENANCE, REPAIR AND/OR REPLACEMENT OF DAMAGED PARTS IS NECESSARY FOR SAFE OPERATION OF EQUIPMENT AND SAFETY OF USERS. RESILIENT SURFACING SHOULD BE USED UNDER ALL PLAYGROUND EQUIPMENT. APPROPRIATE PUBLICATIONS, AVAILABLE AT NO CHARGE, FROM THE CONSUMER PRODUCT SAFETY COMMISSION, INCLUDE "A HANDBOOK FOR PUBLIC PLAYGROUND SAFETY."

YOU CAN RECEIVE YOUR FREE COPY BY CALLING TOLL FREE 1-800-727-8180.

Note: If the H.D. Wheelchair Swing Platform is to be used in an open park or playground installation, we recommend some system of supervision whereby management removes the seat, or secures it to the nearest support, to prevent unsupervised mis-use of the equipment.

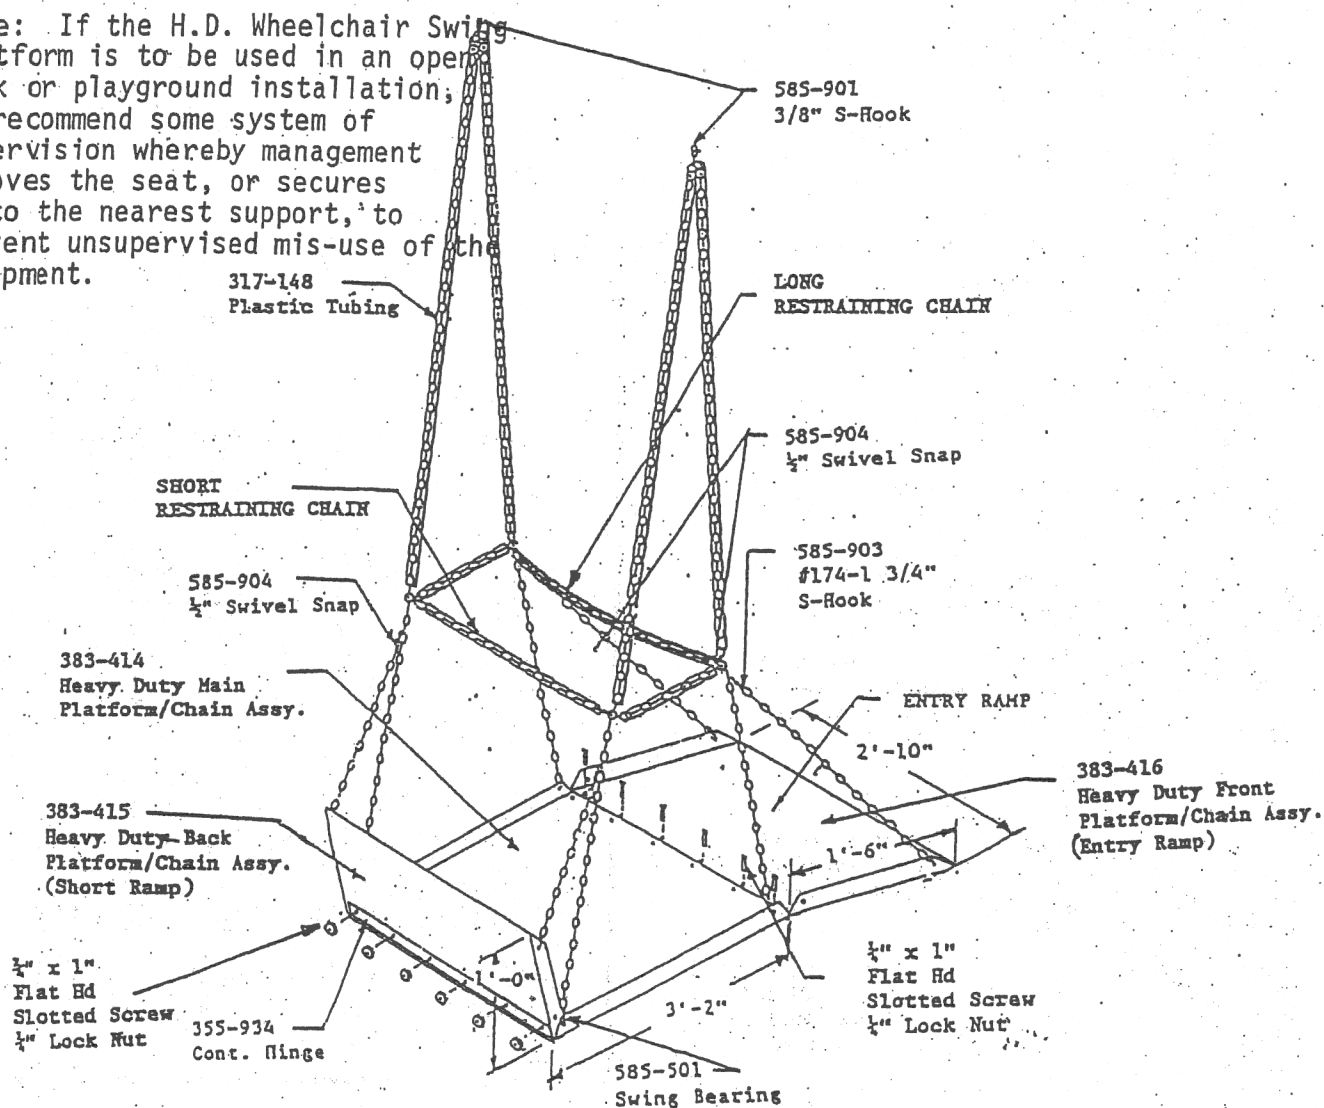

PACKING LIST

- 1 CTN - 1 Hardware Bag
- 1 383-414 Heavy Duty Main Platform/Chain Assy.
- 1 CTN - 1 383-415 Heavy Duty Back Platform/Chain Assy.
- 1 383-416 Heavy Duty Front Platform/Chain Assy.

HARDWARE BAG

- 12 - 186-403 1/4" x 1" Slotted Flat Hd Screws
- 12 - 226-402 1/4" Lock Nut
- 2 CTN 2 TOTAL PCS WT 77#

