

582-965 PULL-CHAIN ATTACHMENT 2 3/8" OD

Page 3 of 10


Rev. 1-7-92

* IMPORTANT *

PLEASE RETAIN THIS INSTRUCTION SHEET IN YOUR FILES. IT CONTAINS IMPORTANT REPLACEMENT PARTS INFORMATION. ALL EQUIPMENT SHOULD BE INSTALLED IN ACCORDANCE WITH THESE INSTRUCTIONS.

IT IS IMPORTANT TO USE AND MAINTAIN ALL PUBLIC PLAYGROUND EQUIPMENT PROPERLY. PLAYGROUND EQUIPMENT WHICH IS IMPROPERLY MAINTAINED CAN CAUSE SERIOUS INJURY. PERIODICAL INSPECTIONS, MAINTENANCE, REPAIR AND/OR REPLACEMENT OF DAMAGED PARTS IS NECESSARY FOR SAFE OPERATION OF EQUIPMENT AND SAFETY OF USERS. RESILIENT SURFACING SHOULD BE USED UNDER ALL PLAYGROUND EQUIPMENT. APPROPRIATE PUBLICATIONS, AVAILABLE AT NO CHARGE, FROM THE CONSUMER PRODUCT SAFETY COMMISSION, INCLUDE "A HANDBOOK FOR PUBLIC PLAYGROUND SAFETY."

YOU CAN RECEIVE YOUR FREE COPY BY CALLING TOLL FREE 1-800-638-2772.

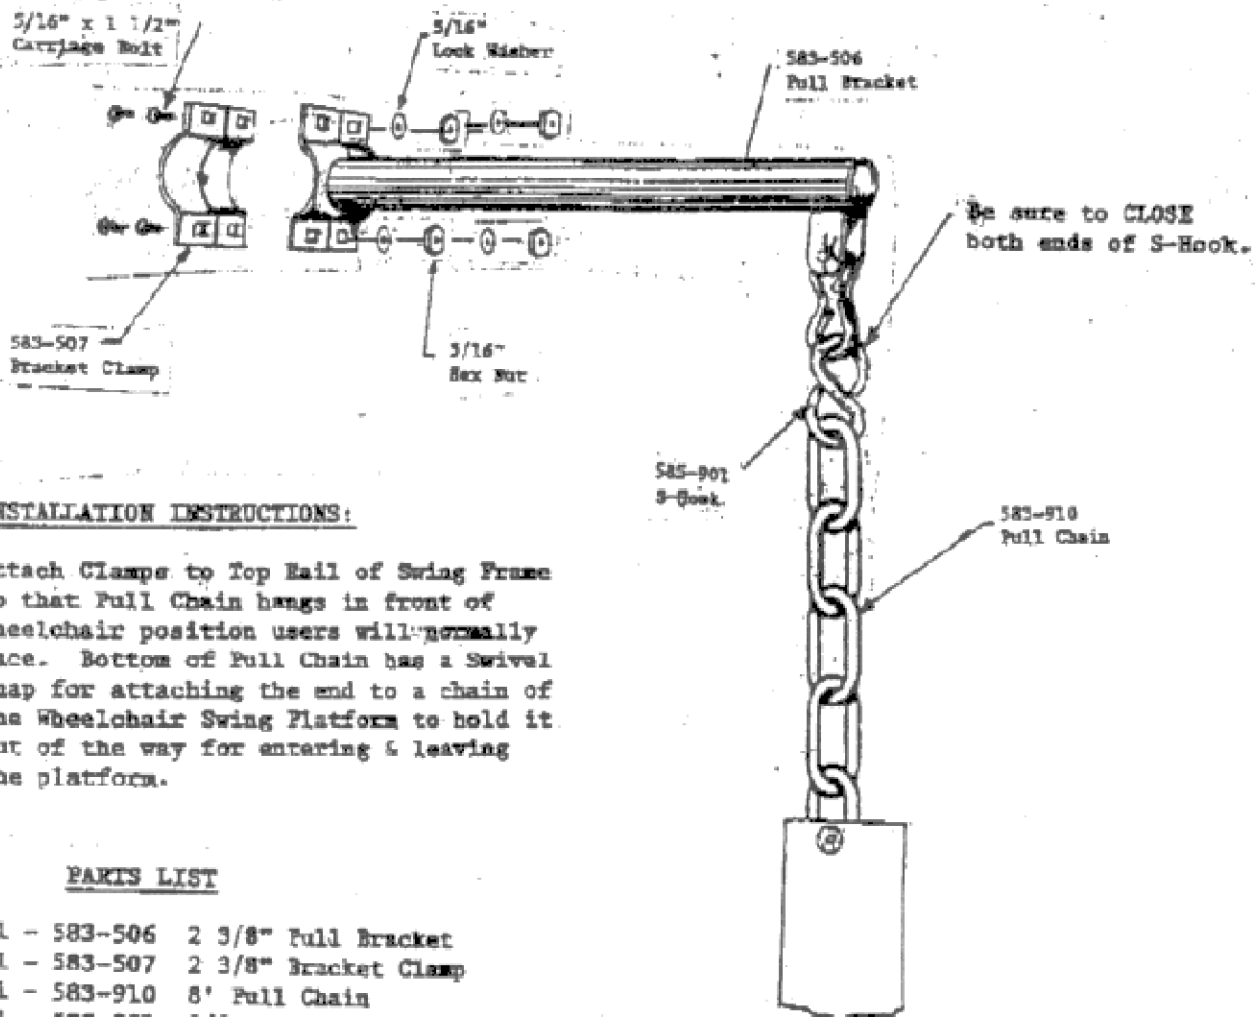

INSTALLATION INSTRUCTIONS:

Attach Clamps to Top Rail of Swing Frame so that Pull Chain hangs in front of Wheelchair position users will normally face. Bottom of Pull Chain has a Swivel Snap for attaching the end to a chain of the Wheelchair Swing Platform to hold it out of the way for entering & leaving the platform.

PARTS LIST

- | | |
|-------------|------------------------------|
| 1 - 583-506 | 2 3/8" Pull Bracket |
| 1 - 583-507 | 2 3/8" Bracket Clamp |
| 1 - 583-910 | 8' Pull Chain |
| 1 - 585-901 | 3/8" S-Hook |
| 4 - 126-506 | 5/16" x 1 1/2" Carriage Bolt |
| 4 - 326-501 | 5/16" Lock Washer |
| 4 - 216-501 | 5/16" Hex Nut |

1 CTN 1 TOTAL PCS WT 25#

SPORTSPRAY EQUIPMENT, INC.
5642 Natural Bridge, St. Louis, Mo. (314) 389-4140